

USE ONLY THE POWER SUPPLIED DEVICE WITH THIS PRODUCT

OPERATE YOUR SYSTEM ACCORDING TO THIS MANUAL

WARNING!

To reduce risk of burns, fire, electric shock, or injury to persons.

1. Your *Relaxor* product should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate the *Relaxor* product if it has a damaged cord or plug, or if it is not working properly. If it has been dropped or damaged, or dropped into water. Contact your dealer for instructions on returning it for examination and repair.
4. Close supervision is necessary when this appliance is used by, on, or near children or disabled persons.
5. Do not use outdoors.
6. Keep the cord away from heated surfaces.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. If you are subject to any medical condition involving the use of medical device products, and/or if you are under a health professional or physician's care, please contact them before using this product.

MAINTENANCE INSTRUCTIONS:

No user maintenance of this product is required. If the System does not function, be sure...
 (a) The TRANSFORMER or ADAPTOR is plugged into an electric outlet.
 (b) The TRANSFORMER or ADAPTOR cord is plugged into, and fully engaged in its receptacle.
 If there is a malfunction of any kind, contact your dealer for instructions on returning it for examination and repair.

If you need assistance for any reason, please contact us:
 Write to: Customer Service InSeat Solutions, Inc. Corporate Office
 11839 Smith Avenue, Santa Fe Springs, CA 90670
 call or fax us at:
1-562-447-1780 ext. 204
FAX: 1-562-447-1798
 www.inseat.com

DANGER!

To reduce risk of electric shock.

1. Always unplug the product from the electrical outlet immediately after using and before cleaning.
2. Do not reach for a product that has fallen into water. Unplug immediately.
3. Do not use while bathing or in a shower.

Read all instructions before using the *Relaxor* System.

IMPORTANT SAFETY INSTRUCTIONS



OWNER S MANUAL and OPERATING INSTRUCTIONS

Welcome to the world of Lift!

You are now the proud owner of another great *Relaxor* product.

Your new *Relaxor* lift system brings the comforting world of lift technology and places it at your fingertips. Now you can adjust your chair to the most comfortable reclining position with just one touch. You have the ultimate combination for your comfort.

We know you will enjoy your new *Relaxor* lift system product.

Limited Manufacturer's Warranty

Patents Pending

©Copyright 2001 InSeat Solutions, Inc. Santa Fe Springs, CA

OPERATING INSTRUCTIONS

BOTH

Moves both BACK and FOOT Actuator Motors simultaneously.

- Activated: Green LED.
- Deactivated: Blue LED.

BACK


Activates BACK actuator Motor independantly from FOOT actuator.

- Activated: Green LED.
- Deactivated: Blue LED.

UP (▲)

Activates actuator motor

- BACK Active: Lifts BACK of chair to upright sitting position.
- FOOT Active: Lifts FOOT rest to open position.

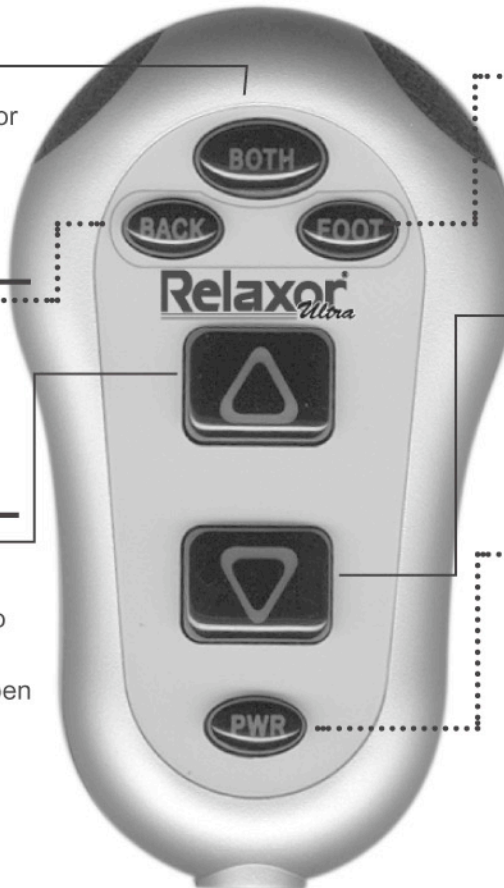

FOOT

Works FOOT actuator Motor independantly from BACK actuator.

- Activated: Green LED.
- Deactivated: Blue LED.

DOWN (▼)

Activates actuator motor

- BACK Active: Lowers BACK of chair to a reclining position.
- FOOT Active: Lowers FOOT rest to closed position.

POWER

Activates Actuator LIFTSystem.

- Turn On: Press and HOLD PWR button down for 3 to 4 seconds. **GREEN** LED will activate.
- Turn Off: Press and HOLD PWR button down for 3 to 4 seconds. **RED** LED will activate.

NOTE: Constant wand lights indicates that there is active power in the wand and will dim down after 10 seconds of non-use.

SAVE THESE INSTRUCTIONS!

OPERATING INSTRUCTIONS

HEAT

Activates Heat Zones.

- Press once (Amber light) to turn Low Heat on.
- Press a second time (Red light) to turn High Heat on.
- Press a third time (Blue light) to turn High Heat off.

Each Heat Zone has an independent 30 minute Timer.

To continue after Timer shuts off, press LO or HI button again.



SAVE THESE INSTRUCTIONS!