

1-562-447-1780

or give us a call at:

11839 Smith Avenue, Santa Fe Springs, CA 90670  
Write to: Customer Service InSeat Solutions, Inc. Corporate Office  
If you need assistance for any reason, please contact us:

If there is a malfunction of any kind, contact your dealer for instructions on returning it for examination and repair.  
(b) The TRANSFORMER or ADAPTOR cord is plugged into, and fully engaged in its receptacle.  
(a) The TRANSFORMER or ADAPTOR is plugged into an electric outlet.  
No user maintenance of this product is required. If the System does not function, be sure...

**MAINTENANCE INSTRUCTIONS:**

1. Your *Best Home Furnishings*® product should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate the *Best Home Furnishings*® product if it has a damaged cord or plug, or if it is not working properly. If it has been dropped or damaged, or dropped into water. Contact your dealer for instructions on returning it for examination and repair.
4. Close supervision is necessary when this appliance is used by, on, or near children or disabled persons.
5. Do not use outdoors.
6. Keep the cord away from heated surfaces.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. If you are subject to any medical condition involving the use of medical device products, and/or if you are under a health professional or physician's care, please contact them before using this product.

**WARNING! To reduce risk of burns, fire, electric shock, or injury to persons.**

1. Always unplug the product from the electrical outlet immediately after using and before cleaning.
2. Do not reach for a product that has fallen into water. Unplug immediately.
3. Do not use while bathing or in a shower.

**DANGER!**

**To reduce risk of electric shock.**

Read all instructions before using the *Best Home Furnishings*® System.

**IMPORTANT SAFETY INSTRUCTIONS**



**OWNER S MANUAL and OPERATING INSTRUCTIONS**

Welcome to the world of Massage!

You are now the proud owner of another great *Best Home Furnishings*® product.

Your new *Best Home Furnishings*® massage system brings the comforting world of massage technology and places it at your fingertips. Now you can enjoy the relaxing feel of vibrating massage on your tired, knotted muscles by choosing from the dozens of pre-programed or self-programed settings.

We know you will enjoy your new *Best Home Furnishings*® massage system product.

Limited Manufacturer s Warranty

Patents Pending

Copyright 2006 InSeat Solutions, LLC. Santa Fe Springs, CA

BTU53H

06/07

#TBD

**USE ONLY THE POWER SUPPLIED DEVICE WITH THIS PRODUCT**  
**OPERATE YOUR SYSTEM ACCORDING TO THIS MANUAL**

# OPERATING INSTRUCTIONS

## POWER

Activates Massage System

- Turn On: Press PWR.
- Turn Off: Press PWR again.

### 15 and 30 minute Timers:

Green light = 15 minute Timer.

Hold down PWR:

Amber light = 30 minute Timer.

- Unit may also be turned on by pressing any ZONE 1-3 key.
- To restart after Timer shuts off:
- Press PWR or any ZONE 1-3 key.

## ZONES

(Green light indicates active Zone)

- 1 - Upper Back
- 2 - Lower Back
- 3 - Hip Region

## INTENSITY

Controls massage motors INTENSITY during all modes. (+) Increase Intensity; (-) Decrease Intensity

## SPEED

Controls pulsing frequency of massage motors in PULSE mode and controls the velocity as it cycles through in WAVE mode.

Press (+) to increase and (-) to decrease.



## HEAT

Activates Heat Element.

- Press LO (Amber light) to turn Low Heat on.
- Press HI (Red light) to turn High Heat on.

Works with massage or independently.  
30 minute Timer

To continue after Timer shuts off, press LO or HI button again.

## MODES

(Green light indicates active Mode)

### ZONE -

Lets you choose any or all zones for massage.

- Press SELECT.
- Press any or all Zones (1-3) to activate.
- Press any or all Zones (1-3) to cancel.

### PULSE -

Massage motors turn On and Off to simulate a pulsing action.

- Press PULSE.
- Press any or all Zones (1-3) to activate.
- Press any or all Zones (1-3) to cancel.

### WAVE -

Massage motors move up and down in a wave-like action.

- Press WAVE.
- Press any or all Zones (1-3) to activate.
- Press any or all Zones (1-3) to cancel.

**NOTE:** Constant wand lights indicates that there is active power in the wand and will dim down after 10 seconds of non-use.

**SAVE THESE INSTRUCTIONS!**