

**OPERATE
YOUR
SYSTEM
ACCORDING
TO THIS
MANUAL
USE ONLY
THE POWER
DEVICE
SUPPLIED
WITH THIS
PRODUCT**

WARNING!

To reduce risk of burns, fire, electric shock, or injury to persons.

1. Your Relaxor Ultra® product should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate the Relaxor Ultra® product if it has a damaged cord or plug, or if it is not working properly. If it has been dropped or damaged, or dropped into water. Contact your dealer for instructions on returning it for examination or repair.
4. Close supervision is necessary when this appliance is used by, on, or near children or disabled persons.
5. Do not use outdoors.
6. Keep the cord away from heated surfaces.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. If you are subject to any medical condition involving the use of medical device products, and/or if you are under a health professional or physician's care, please contact them before using this product.

MAINTENANCE INSTRUCTIONS:

- No user maintenance of this product is required. If the System does not function, be sure...
- (a) The TRANSFORMER or ADAPTOR is plugged into an electric outlet.
 - (b) The TRANSFORMER or ADAPTOR cord is plugged into, and fully engaged in its receptacle.
- If there is a malfunction of any kind, contact your dealer for instructions on returning it for examination and repair.

If you need assistance for any reason, please contact us:

11839 Smith Avenue, Santa Fe Springs, CA 90670
call or fax us at:
1-562-447-1780 ext. 204
FAX: 1-562-447-1798
www.inseat.com

DANGER!

To reduce risk of electric shock.

1. Always unplug the product from the electrical outlet immediately after using and before cleaning.
2. Do not reach for a product that has fallen into water. Unplug immediately.
3. Do not use while bathing or in a shower.

Read all instructions before using the Relaxor Ultra® System.

IMPORTANT SAFETY INSTRUCTIONS



**Relaxor[®]
Ultra**
Massage System

OWNER'S MANUAL and OPERATING INSTRUCTIONS

Welcome to the world of Massage!

You are now the proud owner of another great **Relaxor Ultra[®]** product.

Your new **Relaxor Ultra[®]** massage system brings the comforting world of massage technology and places it at your fingertips. Now you can enjoy the relaxing feel of vibrating massage on your tired, knotted muscles. You have the ultimate combination for your comfort.

We know you will enjoy your new **Relaxor Ultra[®]** massage system product.

Limited Manufacturer's Warranty
Patents Pending

© Copyright 2007 InSeat Solutions, LLC. Santa Fe Springs, CA

OPERATING INSTRUCTIONS

POWER

Activates Massage System

- Turn On: Press PWR
- Turn Off: Press PWR again.

30 minute Timer:

To restart after Timer shuts off:

- Press PWR or MSG key.

HEAT

Activates Heat Element.

- Press LO (Amber light) to turn Low Heat on.
- Press HI (Red light) to turn High Heat on.

Works with massage or independently.

30 minute Timer.

To continue after Timer shuts off, press HEAT button again.

ZONES

(Green light indicates active Zone)

- Zone 1 once to activate message. Press again to deactivate.
- Zone 2 once to activate message. Press again to deactivate.

The location of each zone varies with individual chair styles.

INTENSITY

Controls INTENSITY during all modes.

(+) Increase Intensity; (-) Decrease Intensity.

MODES

(Green light indicates active Mode)

ZONE -

Lets you choose any or all zones for massage.

- Press SELECT.
- Press either or both Zones to activate.
- Press either or both Zones to cancel.

PULSE -

Massage motors turn On and Off to simulate a pulsing action.

- Press PULSE.
- Press either or both Zones to activate.
- Press either or both Zones to cancel.

WAVE -

Massage motors move up and down in a wave-like motion.

- Press WAVE.
- Press both Zones to activate.
- Press any other MODE to cancel.

SPEED

Controls pulsing frequency of massage motors in PULSE mode and controls the velocity as it cycles through in WAVE mode.

Press (+) to increase and (-) to decrease.



NOTE: Constant wand lights indicates that there is active power in the wand and will dim down after 10 seconds of non-use.

SAVE THESE INSTRUCTIONS!